



4WD McNamee wheels Normal Chassis Kit

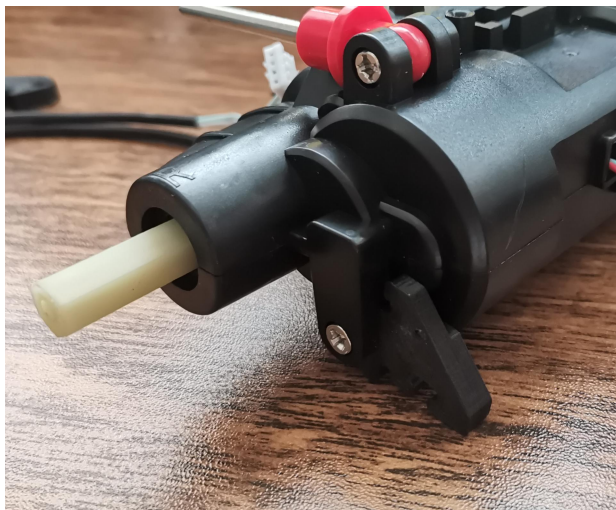


安装 3D 打印铰链，按照如图准备材料（注意铰链两两镜像）

Install the 3D printed hinges and prepare the materials as shown (note that the hinges are mirror images)

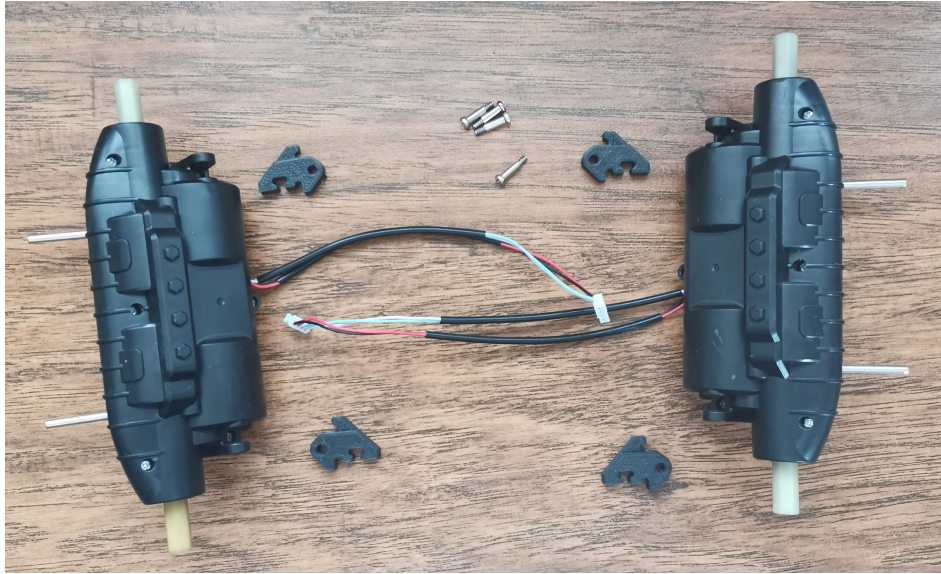


此处的螺丝不受力，拧进去就好，不要太使劲，容易滑丝

The screws here are not under stress, just screw them in, don't use too much force, or they may slip.

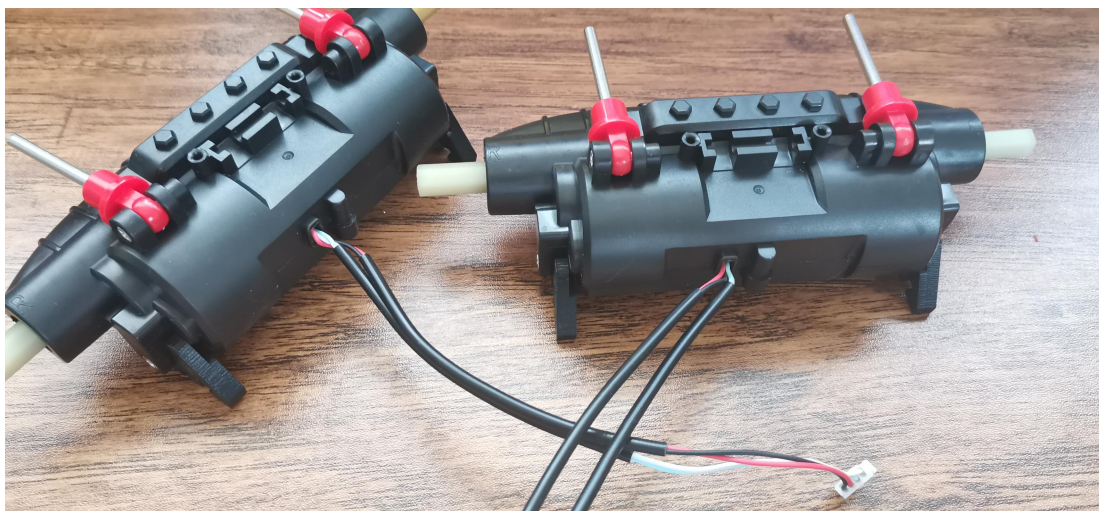


安装大底板（安装时需先在铰链内放入 M3 的螺母，然后用 M3*8 的螺丝固定）

Install the large base plate (when installing, first put an M3 nut into the hinge, then fix it with an M3*8 screw)

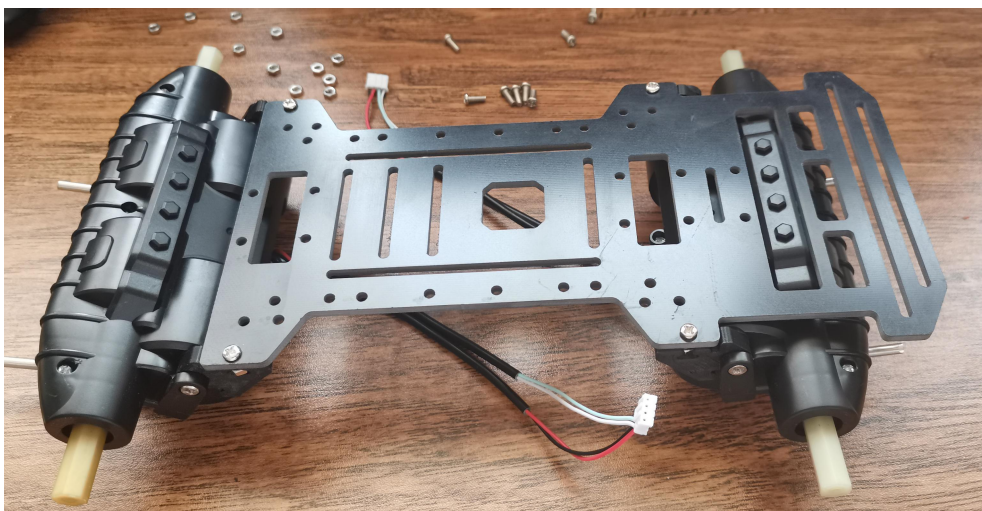

安装梁柱零件（如图准备零件，需先把箭头所指位置处的零件拆除，拆除后如图所示）

Install the beam and column parts (prepare the parts as shown in the figure, and first remove the parts at the position indicated by the arrow, and then remove them as shown in the figure)

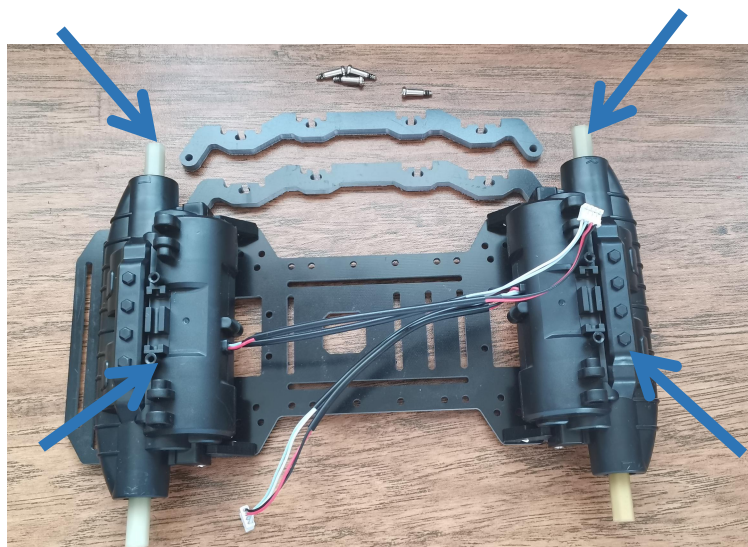

此处的螺丝不受力，拧进去就好，不要太使劲，容易滑丝

The screws here are not under stress, just screw them in, don't use too much force, or they may slip.

梁柱零件安装完毕 Beam and column parts installed



此处的螺丝不受力，进去就好，不要太使劲，容易滑丝



The screws here are not under stress, just screw them in, don't use too much force, or they may slip.

安装第二层面板（如图准备零件，先将六角铜柱固定在面板上后，再安装到最下层的大底板上）

【注】：第二层面板客户可根据自己个人需求自行选装


Install the second panel (prepare the parts as shown, first fix the hexagonal copper column on the panel, and then install it on the bottom large base plate)

[Note]: The second panel can be selected by the customer according to their personal needs

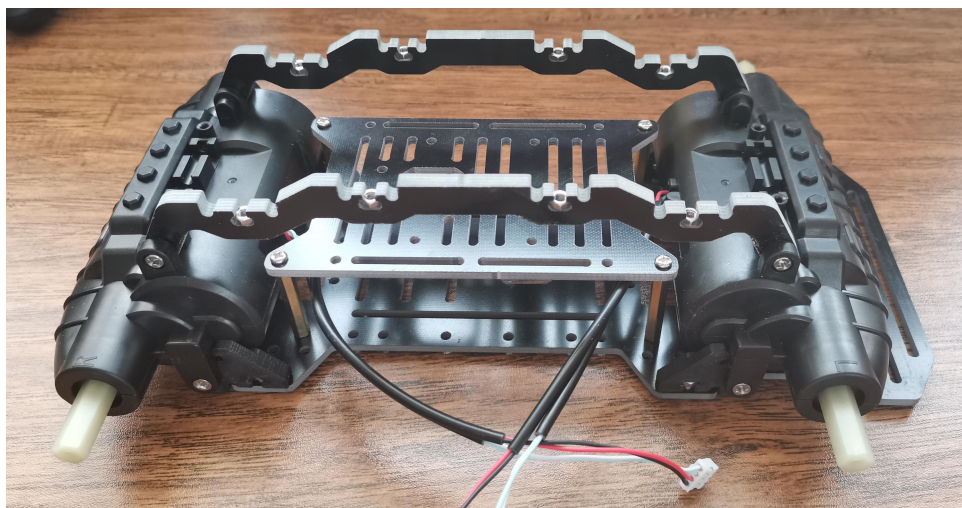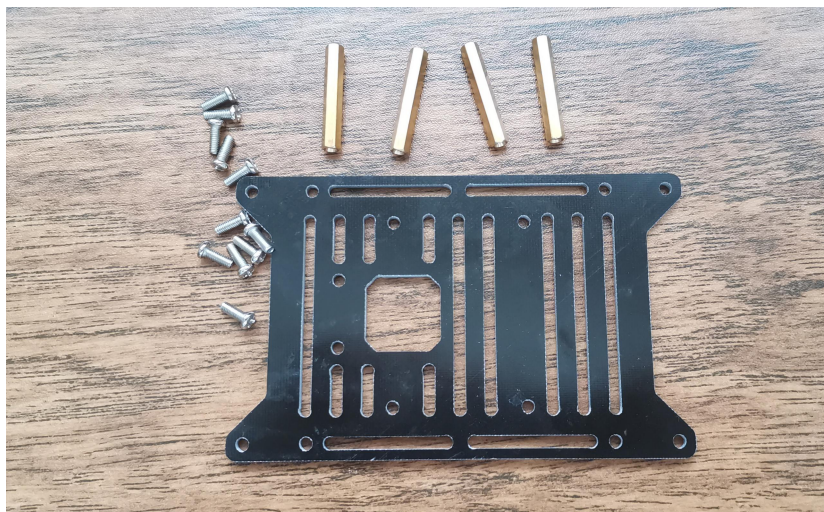

安装顶层面板（如上图所示，需先在梁柱内部放入螺母。再按照下图摆放方向安装三块顶层面板）

Install the top panels (as shown in the picture above, you need to put nuts inside the beams first. Then install the three top panels according to the direction shown in the picture below)

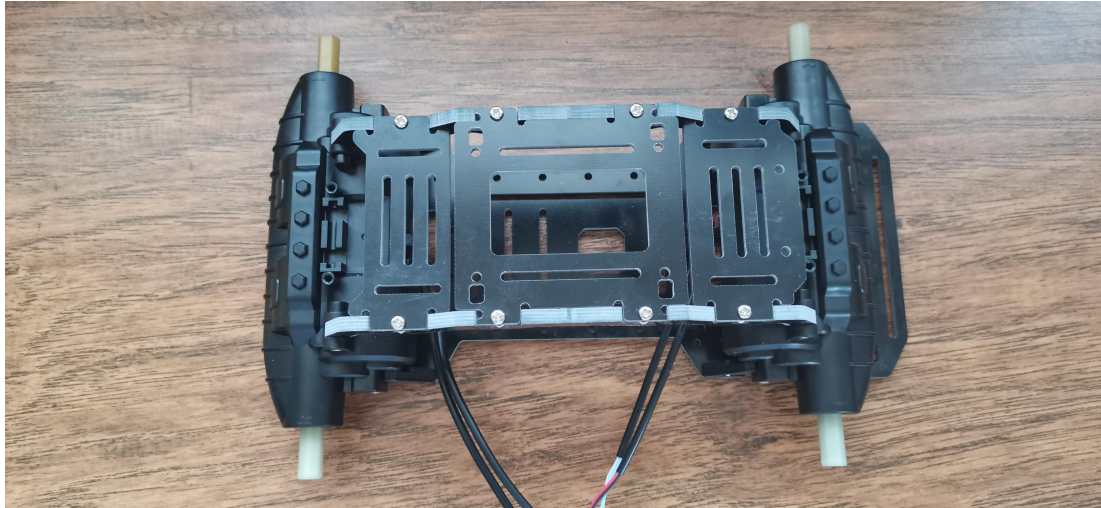

安装轮子（轮子安装方向如下图所示，需特别注意轮子方向）

Install the wheels (the wheel installation direction is shown in the figure below, pay special attention to the wheel direction)

